


- 1 Remove pedal assembly, but do **not** detach brake cable control at pull bar (42-510).
- 2 Drill out rivets on bearing tube (4) from both sides with a 8.2 mm dia. drill bit.
- 3 Remove bearing tube and open up existing hole to 8.2 mm diameter.

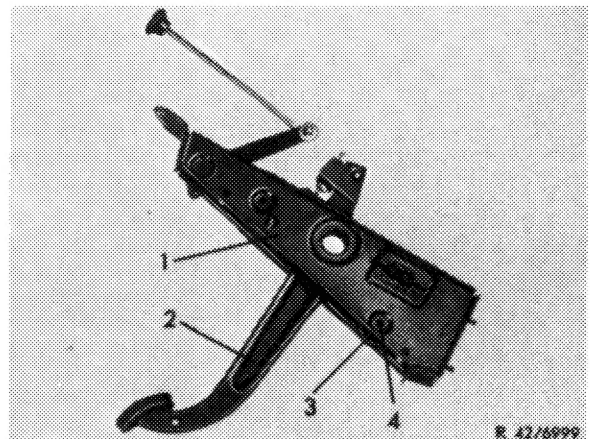

- 4 Install new rubber stop (3) on bearing tube (4). Install bearing tube with rubber stop in carrier and fasten with a 8 x 35 hexagon head bolt, lock washer and hexagon nut.

